
Manual Override Options

*Note: All manual override features are intended for emergency use, not for continuous-duty operation.


Manual Override "M" Option for Two-Position Pull-Type Solenoid Valves

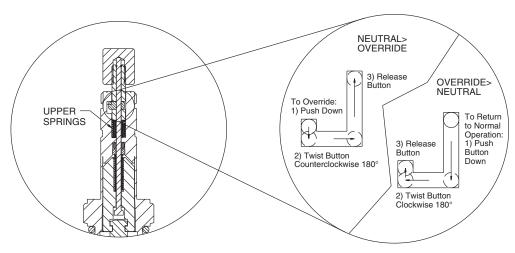

Exaggerated illustration of operation of Manual Override "M" option


Manual Override "M" and "B" Option for Three-Position Push/Pull-Type Solenoid Valves

Operation of Manual Override: To override, push the knurled button to activate the coil #2 (S2) function, or pull the knob to activate the coil #1 (S1) function.

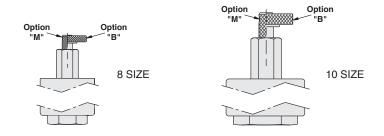

Manual Override "K" Option for Three-Position Push/Pull-Type Solenoid Valves, Detented

Operation of Manual Override: To override, from neutral push button in, twist clockwise 90°, to activate coil #2 (S2) function. From neutral pull and twist 90° counterclockwise to activate coil #1 (S1) function.

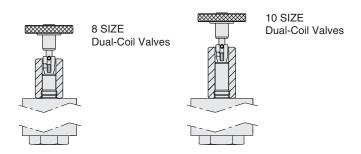

#*HYDRAFORCE.com




Manual Override Options

Manual Override "M" and "B" Option for Three-Position HyPerformance™ Solenoid Valves, Detented

Operation of Manual Override: To override, from neutral push knob down slightly, rotate 90° counterclockwise and pull to activate coil #1(S1) function. Rotate an additional 90° counterclockwise to engage detent.


From neutral push down knob completely to activate coil #2 (S2) function. Rotate 90° clockwise to engage detent.

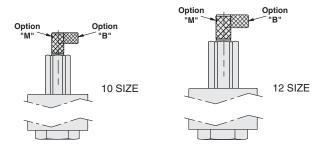

Manual Override "T" Option for HPV Electro-Proportional Valves

Sizes: -20, -21, -30, -31 (for -12 cavities)

 Operation of Manual Override: Rotate knob counterclockwise to activate override function.



Manual Override "J" and "Y" Options for Pull-Type Solenoid Valves

Sizes: -08, -38, -10, -12, -16

Operation of Manual Override: Pull and hold to override.




MANUAL OVERRIDE OPTION "J"



MANUAL OVERRIDE OPTION "J" WITH RED KNOB (#6113032) ORDERED SEPARATELY

Manual Override "M" and "G" Options for PV and ZL Proportional Valves

Operation of Manual Override: Rotate knob counterclockwise to activate override function.

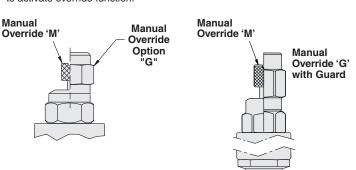

Manual Override "P" and "K" Options for Two-Position Push-Type Solenoid Valves

Operation of Manual Override: Push and hold to override.

